

 


The magic life in the image world

E-IMAGE

MTR-20 (DR200+ST100+MT900) Dual-Channel Wireless Kit

SUPPORT YOUR IMAGE

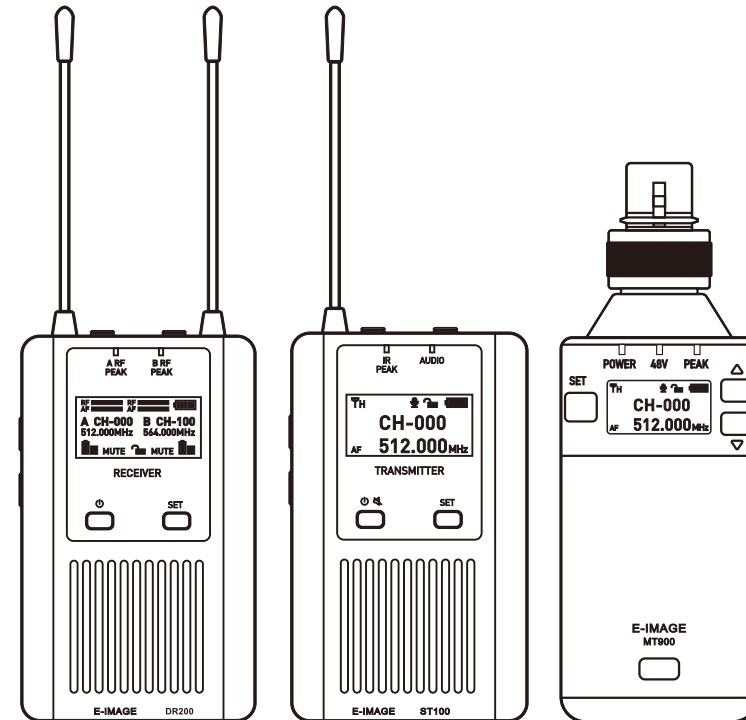

NINGBO EIMAGE STUDIO EQUIPMENT CO., LTD

Add: No.1230 South Cihai Rd, Luotuo Industry zone, Zhenhai,

Ningbo, China. 315202

Tel: +86-574-86590031/86590061

Fax: +86-574-86590078

E-mail: sales@eimagevideo.com

Visit www.eimagevideo.com for more information



E-IMAGE
Official QR Code

www.eimagevideo.com

Operating Manual 2024.3

Contents

Important Safety Tips	2
Standard Use	2
Packing List	3
Function Indication	4
Operating Instructions	5-8
Operating Instructions DR200/ST100	
Receiver screen display	5-6
Battery display instructions	7
Back clip installation	7
Installation and use of cold shoes	7
Transmitter connection equipment	8
Receiver connection equipment	8
Paired transmitter attention	8
Operating Instructions	9-12
Operating Instructions MT900	
Function Indication	9
Plug in transmitter screen display	9-10
Battery installation and removal	10
Connection indication	11
Preparation before using plug-in transmitter	12
Plug in transmitter application	12
Technical Data	12-13
Precautions	14
Warranty Card	14

 
Important Safety Tips

- First of all, thank you for choosing our products. Please read the guide carefully before using this product.
- Please keep the instructions properly. Please always give this product to other users together with the instructions.
- Please pay attention to all warnings and follow all instructions in the instructions.
- Clean the equipment with a soft cloth.
- Do not place the product near heat source, such as radiator, oven or other devices (including loudspeakers).
- Only use additional equipment and accessories matched by the original company.
- All maintenance work must be carried out by specially trained maintenance personnel.
- If the product is damaged in any form, such as liquid or foreign matter penetration or rain, can not work normally or accidentally fall, it must be maintained.
- Warning: do not use this product near water. Do not use the product in rain or wet environment. Otherwise, there is a risk of short circuit.


Standard Use

- Read the instructions carefully, especially the "important safety tips" on this page
- Use the equipment only in accordance with the operating conditions in this instruction manual.
- If you do not use the equipment according to the instructions or do not comply with the working conditions in the instructions, it will be regarded as illegal use.


Packing List

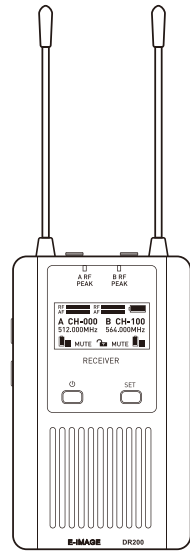


DR200 x 1 PC

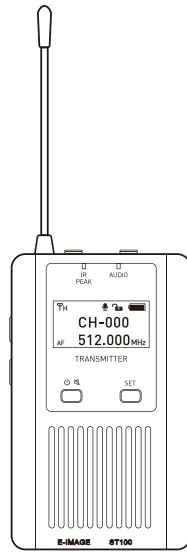 

ST100 x 1 PC

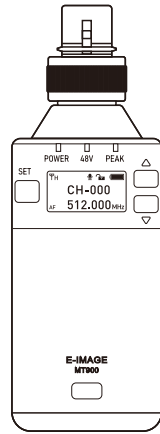 

MT900 x 1 PC

 

TRRS Line (Connect Phone) x 1 PC



TRS Line (Connect Camera) x 1 PC



 
Clip Microphone x 1 PC



XLR Turn 3.5mm (Connect the mixer and other equipment) x 1 PC




Type-C Charging line x 3 PCS




Back Clip x 3 PCS



 Cold Boots x 1 PC




User Manual x 1 PC

 

Carrying Bag x 1 PC


Function Indication

 DR200

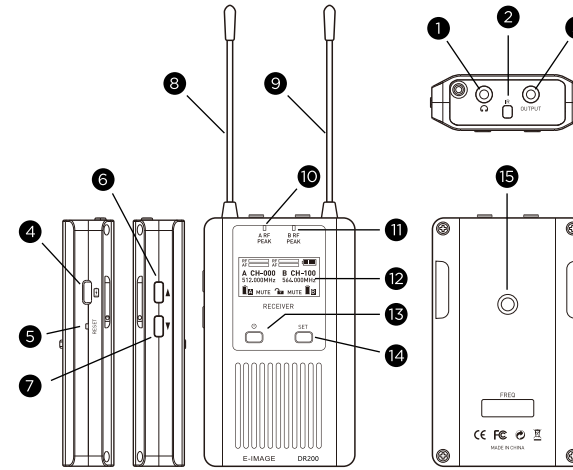

- 1 3.5mm Line Input Interface
- 2 Infrared Matching Window
- 3 3.5mm Microphone Input Connector
- 4 Type-C Charging Interface
- 5 Forced Shutdown Button
- 6 Up Button: Up Menu / Up Page
- 7 Down Button: Down Menu / Next Page
- 8 A Antenna
- 9 B Antenna
- 10 Radio Frequency Signal Indicator
- 11 Audio Indicator / Audio Peak Indicator
- 12 LCD Display
- 13 Switch Button
- 14 Set Button
- 15 1/4 Screw (Cold Shoe Accessories)

 
ST100

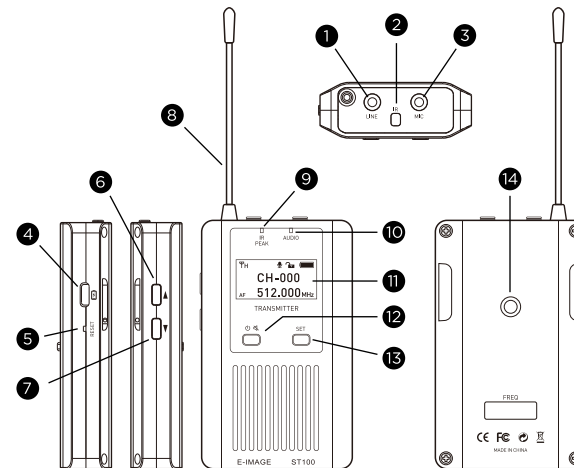

- 1 3.5mm Line Input Interface
- 2 Infrared Matching Window
- 3 3.5mm Microphone Input Connector
- 4 Type-C Charging Interface
- 5 Forced Shutdown Button
- 6 Up Button: Up Menu / Up Page
- 7 Down Button: Down Menu / Next Page
- 8 Antenna
- 9 Audio Peak Light / Infrared Signal Light
- 10 Audio Indicator / Mute Light
- 11 LCD Display
- 12 Switch / Mute Button
- 13 Set Button
- 14 1/4 Screw (Cold Shoe Accessories)

Operating Instructions

 DR200

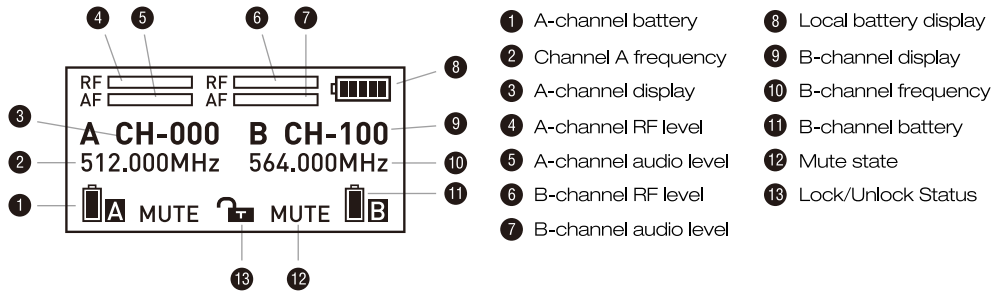

Function Key Indication


SET Key	Homepage Long Press	A / B 100 Passageway
	Long Press	Enter the function adjustment menu
	Short Press	① Confirm the selected function ② Exit function adjustment menu

Receivers Indicator

IR/RF	Green light long bright	Normal working state
	Green light twinkle	No received signal
A RF / PEAK	Red light long bright	Audio peak
PEAK	Red light long bright	Audio peak

Operating Instructions

 ST100




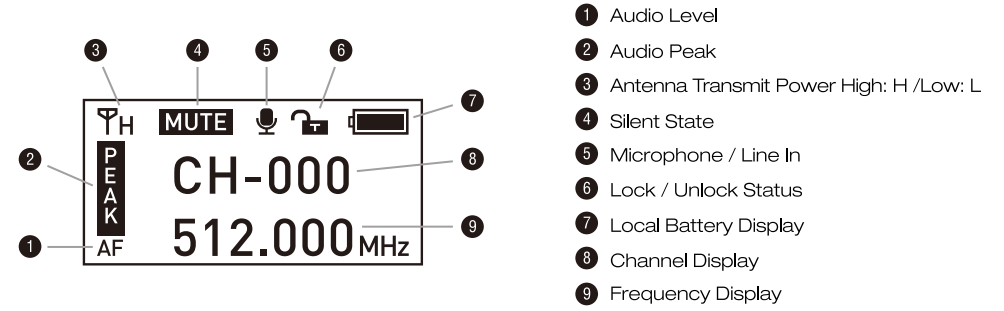


Function Key Indication

SET Key	Long Press	Enter the function Adjustment menu
	Short Press	① Confirm the selected function ② Exit function adjustment menu

Transmitter Indicator

IR	Green light twinkle	Frequency matching in progress
PEAK	Red light long bright	Audio peak
AUDIO	Green light long bright	Normal recording state
	Red light long bright	Mute Mode

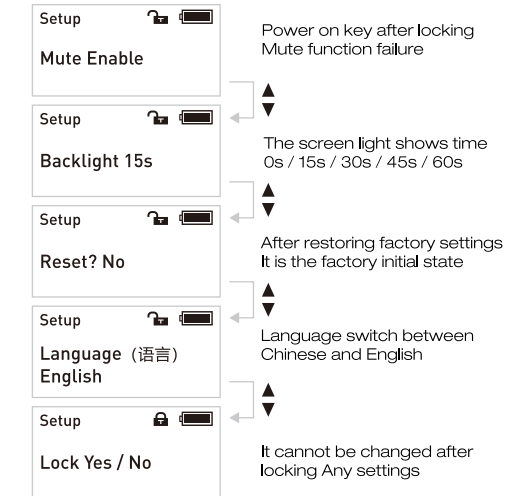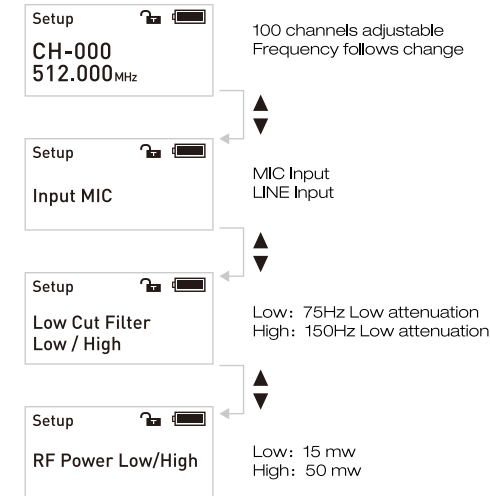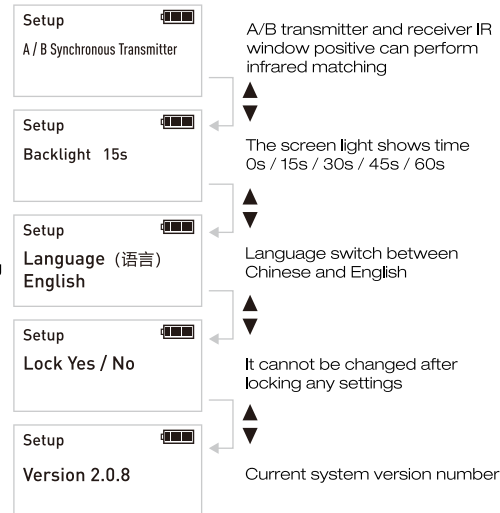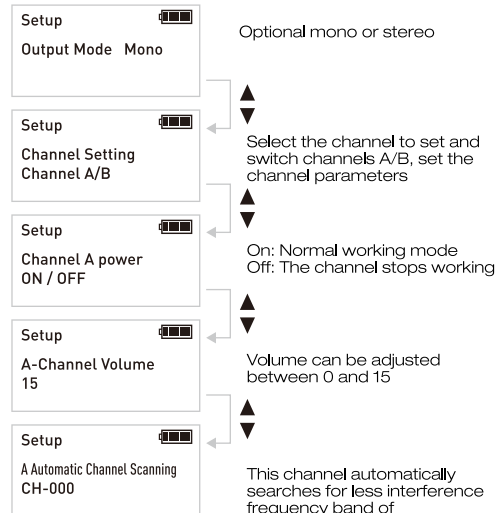    


Operating Instructions


Battery display instructions



 About 70% Power




About 30% Power

 

The battery is running out and the screen is not working flashing indicates charging is required




 Power on charging display status




Power off charging display status

 Back clip installation

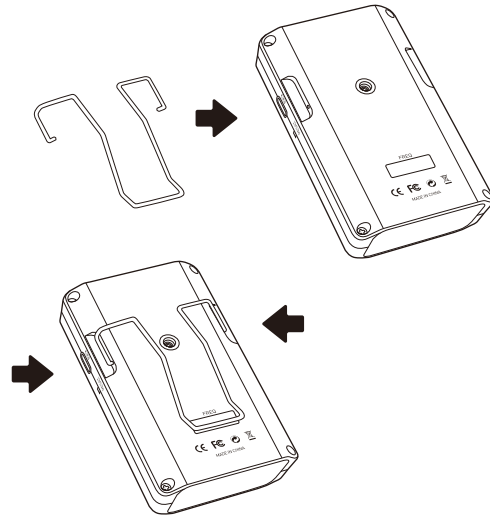


Operating Instructions

 
Transmitter Connection Equipment

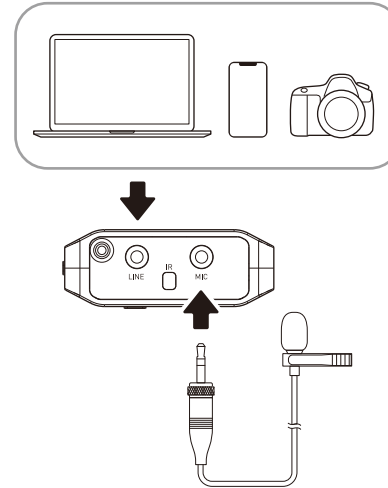

Receiver Connection Equipment

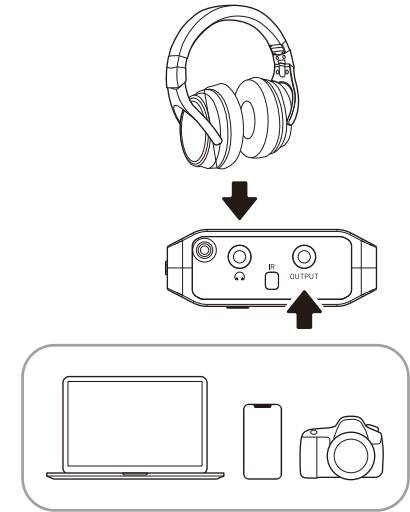 


Installation And Use Of Cold Shoes

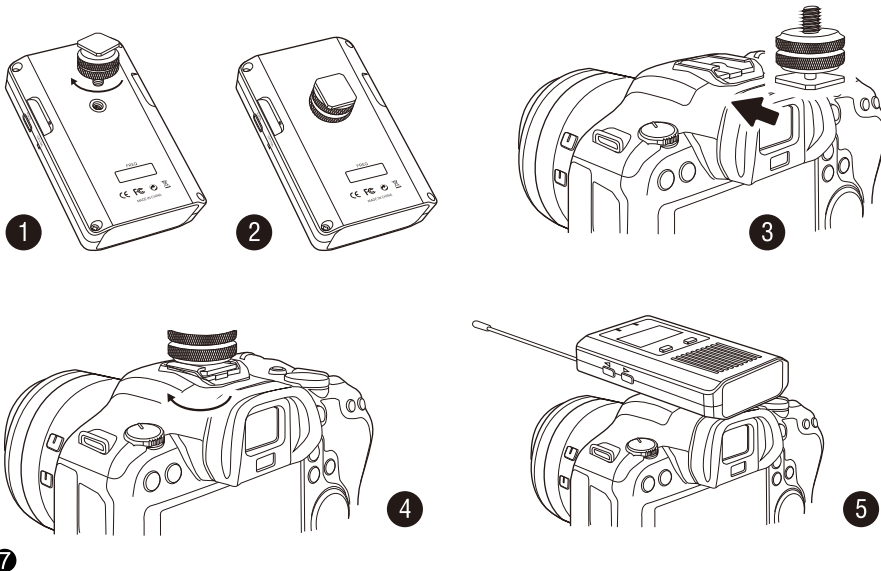 

Paired Transmitter Attention


Wrong Pairing Distance

 If the pairing distance is too close and the signals interfere with each other, the screen will prompt pairing failure.

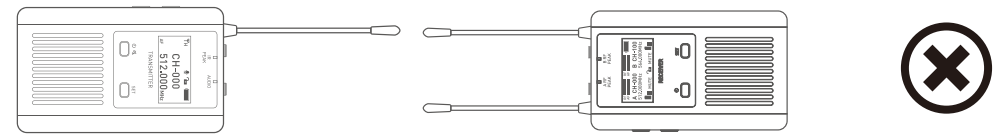


Correct Pairing Distance

 The best matching distance between transmitter and receiver is 30cm.

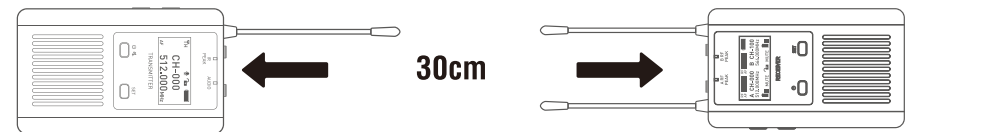

Function Indication


 
MT900

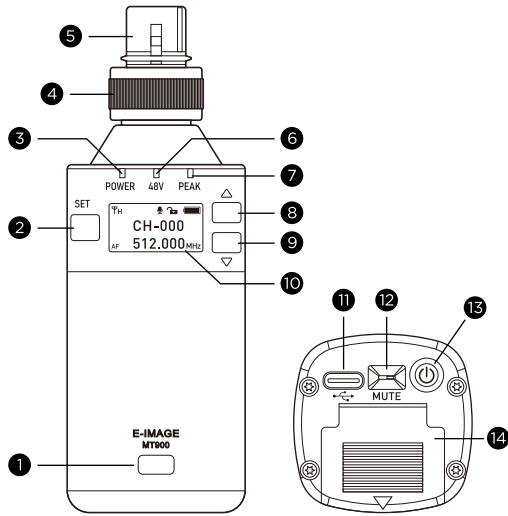

- ① Infrared frequency receiving window
- ② SET setting key
- ③ Power indicator
- ④ External nut (locking or unlocking XLR type equipment)
- ⑤ Audio input connector (XLR type female)
- ⑥ 48V phantom power indicator
- ⑦ Audio indicator/audio peak indicator
- ⑧ Up button: Up menu adjustment/Up page
- ⑨ Down key: Down menu adjustment/Next page
- ⑩ LCD display
- ⑪ Type-C charging interface
- ⑫ Mute (mute) switch
- ⑬ Switch key
- ⑭ Battery compartment (2 x AA 1.5V high performance alkaline battery or 1.2V ≥ 1800mAh NiMH rechargeable battery)

Operating Instructions

  MT900

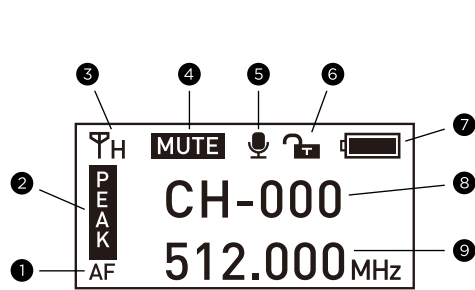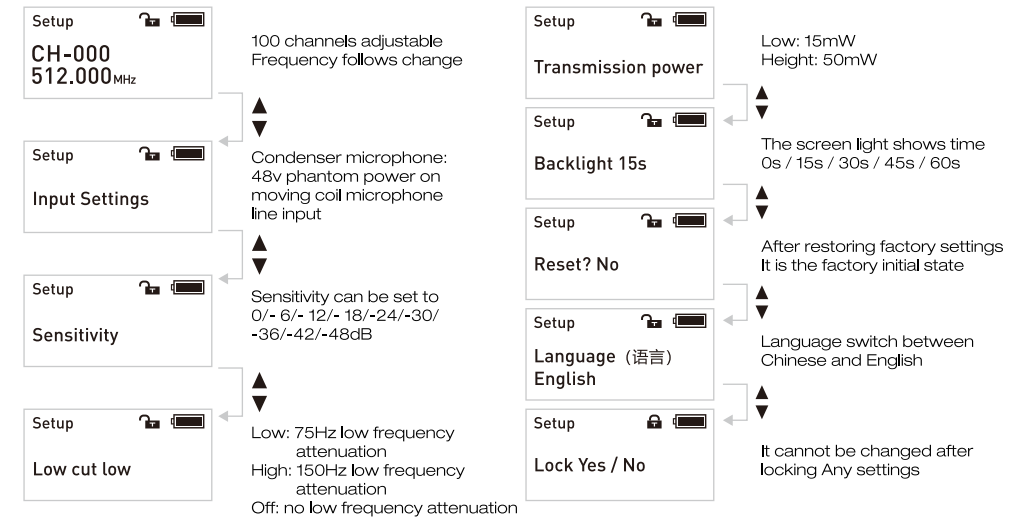

- ① Audio level
- ② Audio peak
- ③ Antenna transmit power high: H/low: L
- ④ Mute state
- ⑤ Microphone/Line In
- ⑥ Lock/unlock status
- ⑦ Local battery display
- ⑧ Channel display
- ⑨ Frequency display

Function Key Indication

SET Button	Long Press	Enter the function adjustment menu
	Short Press	① Confirm the selected function ② Exit function adjustment menu


Indicator Light Indication

POWER	The green light is always on	Normal opening
	Green light flashing	Turn on mute state
48V	The blue light is always on	Turn on 48V phantom power
PEAK	The red light is always on	Audio peak

Battery installation and removal

The portable receiver uses AA 1.5V battery or 1.2V ≥ 1800mAh NiMH rechargeable battery as the power supply

 
- ① Push out the battery cover with your finger in the direction indicated by the arrow, and pull the battery cover outward.
- ② Install the battery or rechargeable battery into the battery box, and pay attention to the positive and negative poles of the battery.
- ③ Close the battery box, and the battery box cover clicks when it is closed.

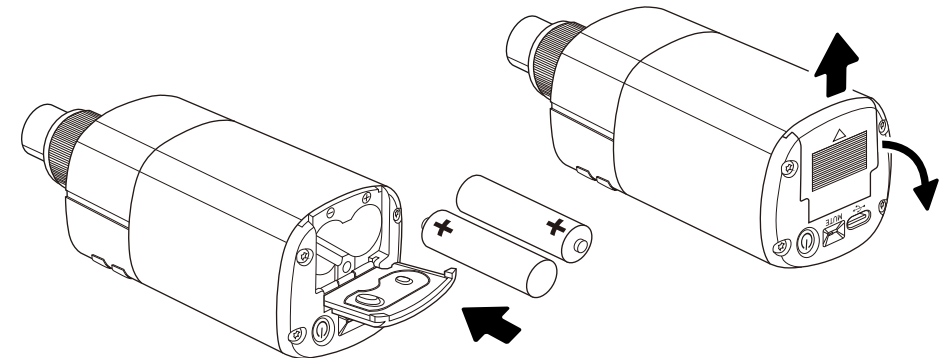

Connection indication

Docking microphone

 
- ① Push the microphone connector into the audio input connector of the plug-in transmitter in the direction of the arrow, until it clicks.
- ② Rotate in the direction of the arrow, and push the outer nut close to the microphone connector to lock it.

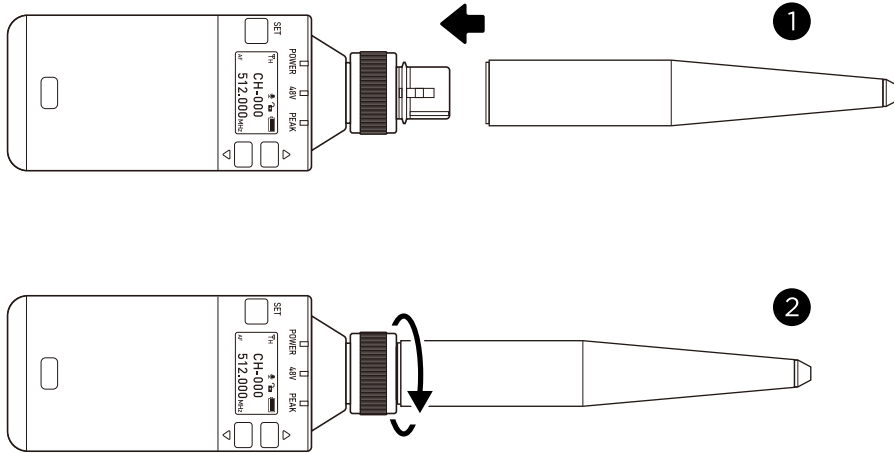

Preparation Before Using Plug-in Transmitter

⚠ Notes on charging connection

 Charger requirements: DC 5V 1000mA (only rechargeable when using 1.2V NiMH rechargeable battery).

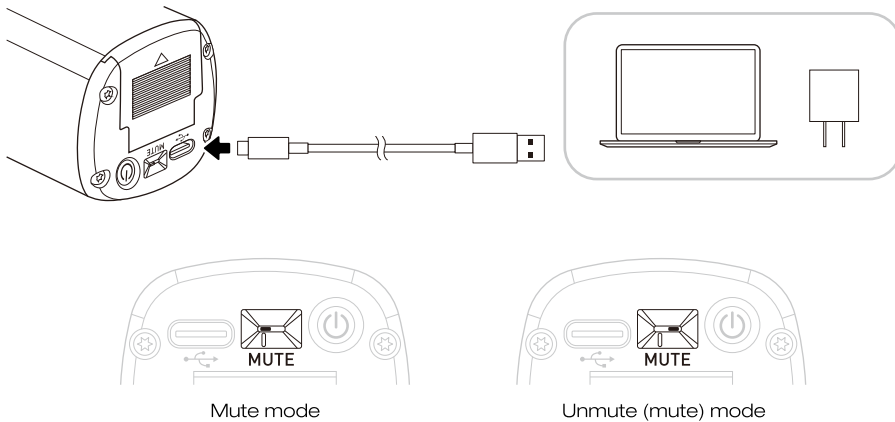


Mute mode

Unmute (mute) mode

Plug in transmitter application


Devices without 48V phantom power

 Wired dynamic microphone or various sound sources LINE output (XLR type) is used together.

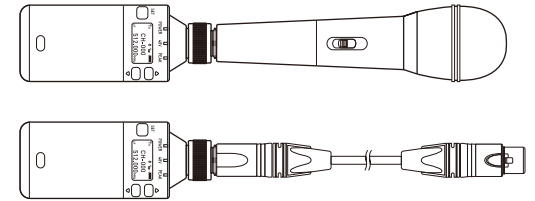

Device to turn on 48V phantom power

 Wired interview microphone, large diaphragm condenser microphone and the use of capacitive pickups for many musical instruments.

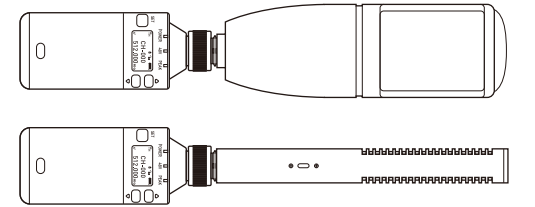

Technical Data

Model	MT900
Frequency Range	UHF500-900MHz
Receiver	AWM-U1
Input socket	XLR
Transmitter power	10mW~30mW
Harmonic radiation	<-55dBc
Input Mode	Mic / Line
Max Input	MIC=130mV@1KHz / LINE=1500mV@1KHz
Maximum offset	± 45KHz@1KHz
Phantom power voltage	+48V
Battery	AA1.5V/1.2V Ni-MH battery
Charging Mode	Type-c DC5V@≥1000mA
Size	44x44x110mm
Operating Temperature	0-50℃
Material	Aluminum

Technical Data

Model	DR200
Channel	A/ B 100CHs
Wireless Frequency Range	UHF500~900MHz
Frequency Response	60Hz~15KHz
Transmitting Power	10mW(Low) / 30mW(High)
Stray Radiation	< -60dB
Audio T.H.D	< 0.5%@1KHz
High pass filter	-75Hz(Low) / -150Hz(High)
Audio Output	Mono / Stereo
Display Screen	LCD
Working Distance	In line-of-sight area(120m) / In barrier area(60m)
Power	Type-C 3.5 hours full,DC 5V@1000mA
Battery	Built-in li-ion battery,3.7V,1800mA/Hour
Working time	10Hours
Size	96x60x19mm
Operating Temperature	0-50℃
Material	Aluminum

Model	ST100
Channel	100CHs
Wireless Frequency Range	UHF500-900MHz
Frequency Response	60Hz~15KHz
Transmitter power	10mW~30mW
Stray Radiation	<-60dB
Audio T.H.D	< 0.5%@1KHz
High pass filter	-75Hz(Low) / ~150Hz(High)
Audio Output	Mono
Display Screen	LCD
Working Distance	In line-of-sight area(120m) / In barrier area(60m)
Power	Type-C 3.5 hours full,DC 5V@1000mA
Battery	Built-in li-ion battery,3.7V,1800mA/Hour
Working time	10 Hours
Size	96x60x19mm

Precautions

Please pay attention to the following tips when using the transmitter and receiver.

Use only transmitters and receivers with the same frequency range (see transmitters and Band label on the back of the receiver) to ensure that the required frequency is included in the attached frequency data sheet, ensure that the required frequency is allowed in the place of use, if necessary to apply for a use license.

In the factory state, the transmitter and receiver have completed pairing settings with each other, such as if the connection between the transmitter and receiver cannot be established, please re pair the settings standby channel.

Usage suggestions

Properly modulate and connect the transmitter and receiver to obtain the best sound effect.

For best reception

The signal range of the transmitter and receiver depends on the conditions of the place of use, and may be between 5m and 100m; there should be no obstruction between transmitter and receiver. Obstacle of line of sight, the distance between transmitter and receiver shall be kept at a maximum of 2m. Small spacing, which can avoid overshoot of the radio signal of the receiver.

Operation for multi-channel devices

When using multiple transmitters, avoid transmission lines formed by short transmitter spacing. The channel interference shall be kept at least 50 cm between each transmitter and receiver distance.

Warranty Card

Customer Information

Customer Name	Contact No.
Address	

Sales Manager

Sales Date	Dealer
Dealer Contact No.	

#1 Maintenance Record

Service Date	Signature of Repairman
Cause of Problem	
Service Result:	<input type="checkbox"/> Solved <input type="checkbox"/> Unsolved <input type="checkbox"/> Refunded/ Replaced